



stilum
horse



Access Aid
400 x 400 x 400 mm



ACCESS AID

400 x 400 x 400 mm | Item-No. 1965001x1

The cube is a real all-rounder because it can be used anywhere! Whether as a mounting aid in riding arenas and stable lanes or as a seating element - the cube cuts a fine figure everywhere. And the best thing about it is that its heavy weight prevents it from being quickly 'taken away' or horses from knocking it over or injuring themselves when the rider is mounting.

ACCESS AID

400 x 400 x 400 mm | Item-No. 1965001x1

ADVANTAGES

- Shock absorbing
- Seating element
- Access aid

APPLICATION

- Spectator areas
- Riding arenas
- Stable aisles

Access Aid without floor anchor:

Access Aids are placed on the existing surface and glued to it according to the gluing instructions

Access Aid with floor anchor:

can be embedded with the ground anchors into the prepared concrete foundations to fix them permanently.

GLUING


Preparation of the subsoil:

Before installing, the subsoil must be compressed and fixed. Please pay attention that the adhesion areas are free from oil, grease and other residues e.g. colour, rubber adhesion, etc.

Preparation of the cartridge:

Push the membrane in to the threaded piece and screw on the cut-to-size plastic nozzle. Then remove the bottom plate of the cartridge with a screw driver and insert the cartridge by hand or with a compressed air pistol. The adhesion follows on a complete cleaned subsoil with gluing points on the bottom of the Access aid.

The surface and environment temperature must be at least 5 °C. The Cubes should only be installed in dry weather conditions. Adhesive cartridges should not be stored under 10°C. Please pay attention that the Cube is not moved for 48 hours.

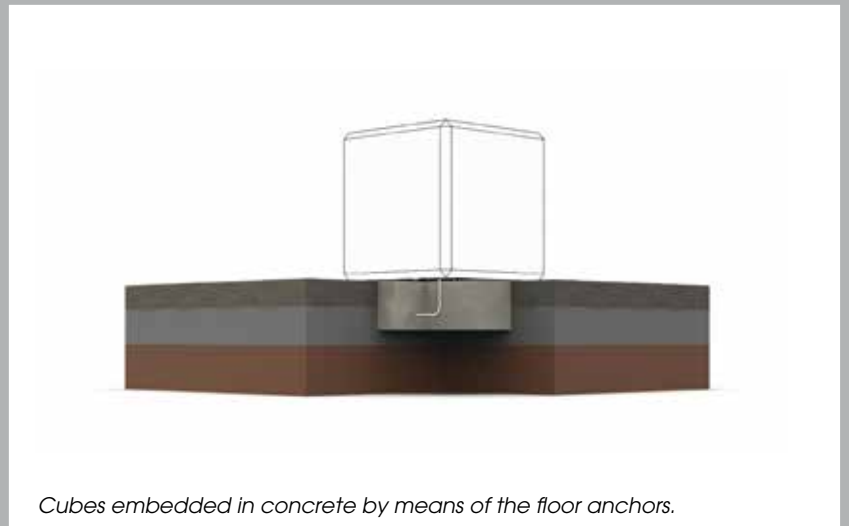

Cubes embedded in concrete by means of the floor anchors.